MEDIA

CONVERTER

INDUSTRIAL

Quick Installation Guide

IMC-B111ETB Series


Industrial Extended Media Converter

Introduction

The IMC-B111ETB series is a cost-effective solution for extending an Ethernet connection beyond its inherent distance limitation. The series includes models using -RJ45 or terminal block interfaces. The -RJ45 model extends the distance to 300 meters using a UTP cable or 200 meters using a 24AWG cable, and the terminal block model extends the distance to 200meters using a 24AWG cable. The -RJ45 model supports 2/4/8-wired auto detecting transmission, and the TB model supports 2-wired transmission. The series provides a wide operating temperature range from -40~75°C, making it suitable for harsh operating environments.

Package Contents


The series is shipped with the following items. If any of these items is missing or damaged, please contact your customer service representative for assistance.

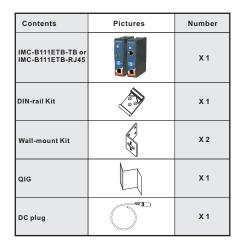


Preparation

Before installation, make sure you have all of the package contents available and a PC with Microsoft Internet Explorer 6.0 or later, for using web-based system management tools.


Safety & Warnings



Reduced Air Flow: Installation of the equipment should be such that the amount of air flow required for safe operation of the equipment is not compromised




Circuit Overloading: Consideration should be given to the connection of the equipment to the supply circuit and the effect that overloading of the circuits might have on overcurrent protection and supply wiring. Appropriate consideration of equipment nameplate ratings should be used when addressing this concern.

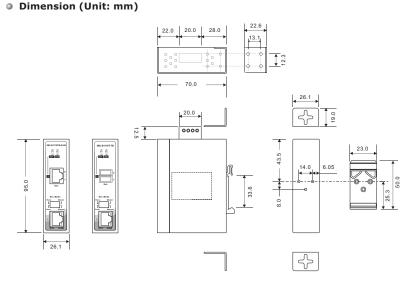

1. PWR1 LED

Panel Layouts

Front Panel

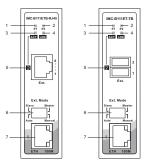

1. Wall-mount screw


2. PWR2 LED 3. Indicator for extension port action 4. Indicator for extension port connection status

5. Extension port (terminal block for -TB model and RJ45 port for -RJ45 model) 6. DIP switch for mode selection of extension port 7. LAN Port

Installation

DIN-rail Installation


Step 1: Slant the switch and screw the Din-rail kit onto the back of the switch, right in the middle of the back panel. Step 2: Slide the switch onto a DIN-rail from the Din-rail kit and make sure the switch clicks into the rail firmly

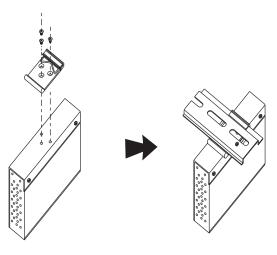

Wall-mounting

Step 1: Screw the two pieces of wall-mount kits onto both sides of the switch. A total of eight screws are required, as shown below. Step 2: Use the switch, with wall mount plates attached, as a guide to mark the correct locations of the four screws. Step 3: Insert four screw heads through the large parts of the keyhole-shaped apertures, and

then slide the switch downwards. Tighten the four screws for added stability.

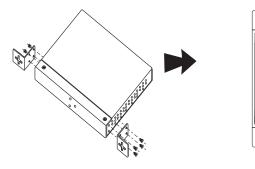



Top Panel



0

1. Din-rail screw holes

ORing

Quick Installation Guide

Network Connection

The **IMC-B111ETB-RJ45** has a standard Ethernet port. According to the link type, the device uses CAT 3,4, 5,5e UTP cables to connect to any other network devices (PCs, servers, switches, routers, or hubs). Please refer to the following table for cable specifications.

Cable Types and Specifications:

Cable Type		Max. Length	Connector
100BASE-TX	Cat. 5 100-ohm UTP	UTP 100 m (328 ft)	RJ-45

For pin assignments for different types of cables, please refer to the following tables.

100Base-TX RJ-45		10	0Base-TX MDI/M	/IDI-X
Pin Number	Assignment	Pin Number	MDI port	MDI-X port
1	TD+	1	TD+(transmit)	RD+(receive)
2	TD-	2	TD-(transmit)	RD-(receive)
3	RD+	3	RD+(receive)	TD+(transmit)
4	Not used	4	Not used	Not used
5	Not used	5	Not used	Not used
6	RD-	6	RD-(receive)	TD-(transmit)
7	Not used	7	Not used	Not used
8	Not used	8	Not used	Not used

100Mbps Extension port Terminal Block			100Mbps Extension port Terminal Block		
Pin Number	Assign ment*	1	Pin Number	Assignment*	
1	D1+		1	D1+	
2	D1-		2	D1-	
		-	3	D2+	
			4	D3+	
			5	D3-	
			6	D2-	
			7	D4+	

Note: "+" and "-" signs represent the polarity of the wires that make up each wire pair.

8

D4-

DIP Switch Function

1	ON	Master Mode: Devices operates in master mode
	OFF	Slave Mode: Devices operates in slave mode
2*	ON	Manual Mode: Configures the master mode or slave
		mode manually based on DIP-switch 1 settings
	OFF	Auto Mode: Conducts auto negotiation and
		configuration for the master or slave mode

* Please notice Manual mode can't connect to Auto mode.

Wiring

The switch supports dual redundant power supplies which are located on the 4-pin terminal block.

STEP 1: Insert the negative/positive wires into the V-/V+ terminals, respectively.

STEP 2: To keep the DC wires from pulling loose, use a small flat-blade screwdriver to tighten the wire-clamp screws on the front of the terminal block connector.

Configurations

After installing the device and connecting cables, the green power LED should turn on. Please refer to the following tablet for LED indication.

IMC-B111ETB Series

LED indication table

LED	Color	Status	Description		
PW1	Green	On	DC power module 1 activated		
PW2	Green	On	DC power module 2 activated		
10/100Base-TX	10/100Base-TX RJ45 Port				
LNK	Green	On	Port is linked		
ACT	Amber	On	Transmitting data		
Ethernet Extender Port					
LNK	Green	On	Port is linked		
ACT	Amber	On	Transmitting data		

Specifications

ORing Extended Converter Model	IMC-B111ETB-TB	IMC-B111ETB-RJ45		
Physical Ports				
100Base-TX Ports in RJ45 Auto MDI/MDIX	1			
100Mbps Ethernet Extender Ports	1 (support 2-wired on terminal block)	1 (support 2/4/8-wired auto detecting on RJ45 connector)		
Technology				
Ethernet Standards	IEEE 802.3u for 100Base-TX			
Processing	Store-and-Forward			
Power				
Input power	Dual 12~48 VDC power inputs at 4-p	pin terminal block		
Power consumption(Typ.)	2Watts			
Overload current protection	Present			
Physical Characteristic				
Enclosure	IP-30			
Dimension (W x D x H)	26.1(W) x 70(D) x 95(H)mm (1.03x 2.76 x 3.74inch.)			
Weight (g)	240 g	242 g		
Environmental				
Storage Temperature	-40 to 85°C (-40 to 185°F)			
Operating Temperature	-40 to 75°C (-40 to 167°F)			
Operating Humidity	5% to 95% Non-condensing			
Regulatory Approvals				
EMI	FCC Part 15, CISPR (EN55022) class	A		
EMS	EN61000-4-2 (ESD), EN61000-4-3 (RS), EN61000-4-4 (EFT), EN61000-4-5 (Surge), EN61000-4-6 (CS), EN61000-4-8, EN61000-4-11			

Shock	IEC60068-2-27
Free Fall	IEC60068-2-32
Vibration	IEC60068-2-6
Safety	EN60950-1
Warranty	5 years

Industrial Extended Media Converter

